

# INSTALLATION INSTRUCTIONS


Montagehandleiding | Montageanleitung

## PV SHELTER BACK2BACK TYPE 200





**PV SHELTER**  
BY CONDUCT

**TOOLS | GEREEDSCHAP | WERKZEUGE**

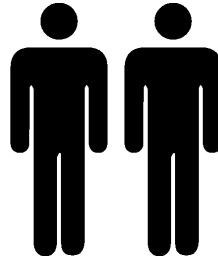


**SUPPLIES | ONDERDELEN | KOMPLEMENTEN**

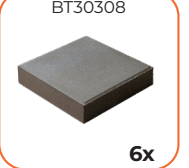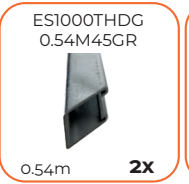


**1**

**INSTALL BOTTOM FRAME**

MONTEER BODEMFRAME  
BEFESTIG BODENRAHMEN

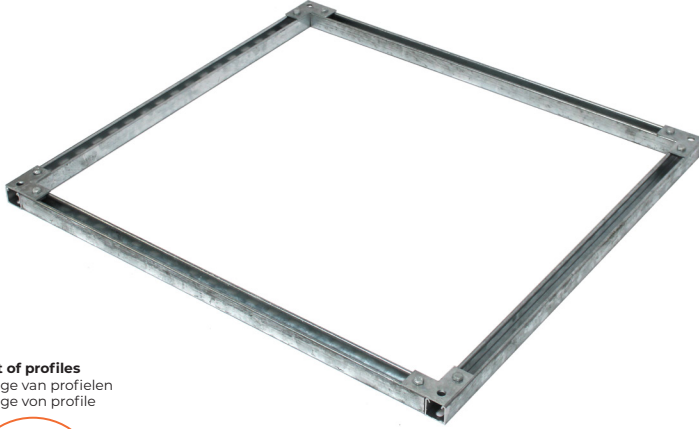

**Mount of profiles**  
Montage van profielen  
Montage von profilen

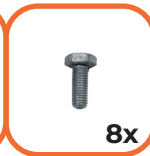

**2**

**PLACE INNER BALLAST SUPPORT**

PLAATS BINNENSTE BALLASTDRAGERS  
SETZ INNERE BALLASTTRÄGER AUF





**3**

**PLACE OUTER BALLAST SUPPORT**

PLAATS BUITENSTE BALLASTDRAGERS

SETZ ÄUSSERE BALLASTTRÄGER AUF






**4**

**PLACE THE ROOF SUPPORT UNDER THE BOTTOM FRAME**

PLAATS DAKSTEUNEN ONDER BODEMFRAME

SETZ DACHTRÄGER UNTER BODENRAHMEN AUF

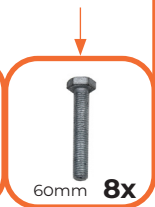
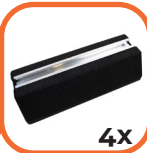
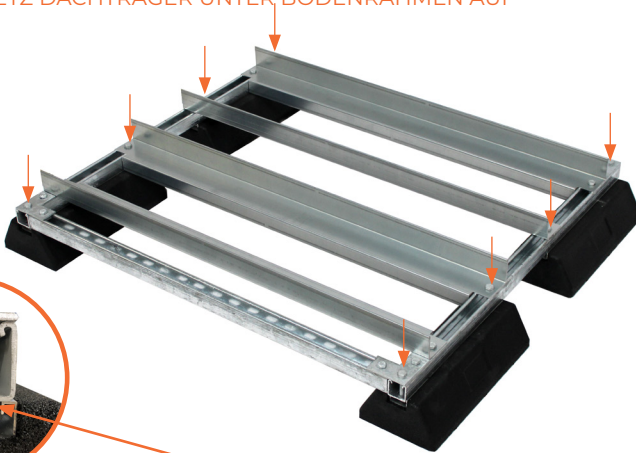


## 5 MOUNT THE INVERTER FRAME MONTEER OMVORMERFRAME BEFESTIG WECHSELRICHTERRAHMEN

See page 8 for inverter installation instructions for desired distance.

Bekijk pagina 8 voor omvormer montage-instructie voor gewenste afstand.

Betracht Seite 8 für Montageanleitung für gewünschte Entfernung des Wechselrichters.

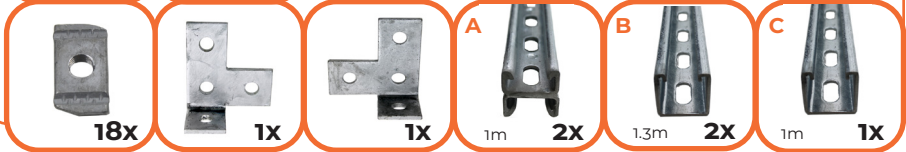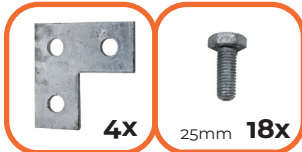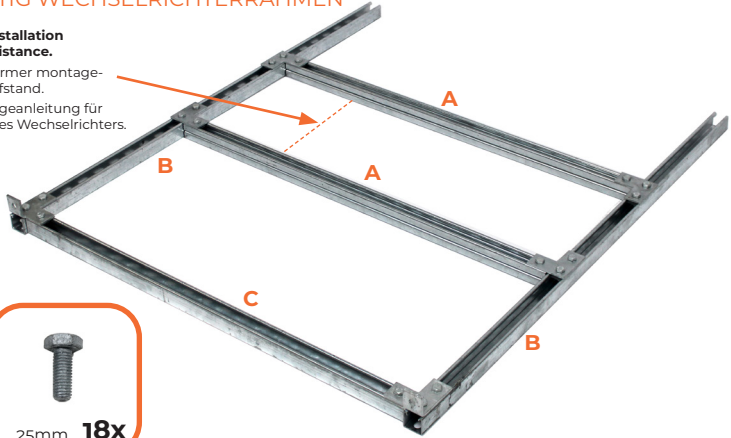

## 6 TURN AROUND THE FRAME AND MOUNT STRUT PLATE DRAAI OM EN MONTEER SCHOORPLATEN DREHE UM UND BEFESTIG STREBENPLATTE






**7**

**PLACE INVERTER FRAME ON BOTTOM FRAME**

PLAATS OMVORMERFRAME OP BODEMFRAME

BEFESTIG WECHSELRICHTERRAHMENN AUF BODENRAHMEN

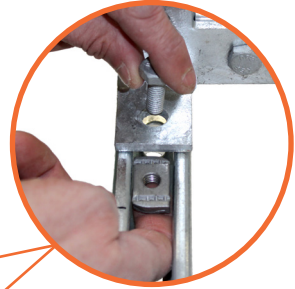

**2X**




25mm **2X**

**8**

**MOUNT STRUT PROFILE AT 45°**

MONTEER SCHOORPROFIELEN OP 45°

BEFESTIG STREBENPROFIL AUF 45°

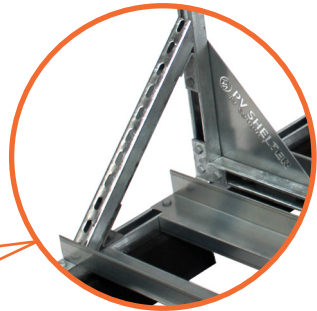

**8X**



**4X**



0.54m **2X**



**8X**

**9**

**PLACE ROOF ON INVERTER FRAME**  
PLAATS DAK OP OMVORMERFRAME  
BEFESTIG DACH AUF WECHSELRICHTERRAHMEN



**4X**



60mm **4X**



**1X**


**10**

**SECURE WITH CONCRETE TILES**  
VERZWAAR MET BETONTEGELS  
VERSCHLIMMER MIT BETONPLATTEN



**3X**

**3X**




**6x**

11

**SCAN FOR INSTALLATION INSTRUCTION OF THE DESIRED INVERTER**

SCAN VOOR MONTAGEHANDLEIDING VAN DE GEWENSTE OMVORMER

SCAN FÜR MONTAGEANLEITUNG DES GEWÜNSCHTEN WECHSELRICHTERS

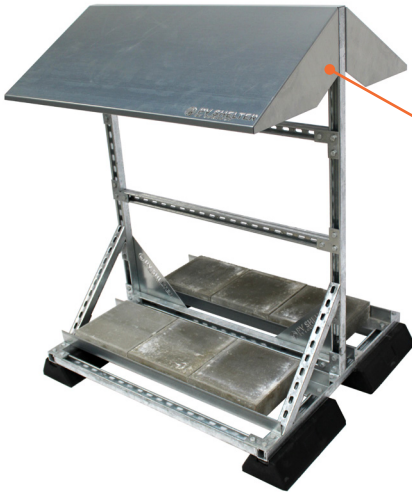

[conduct.nl/pvshelter-montage-eng](https://conduct.nl/pvshelter-montage-eng)



**PV SHELTER**  
BY CONDUCT